



HOW TO USE

- Check that the hottub is full of water before you make fire. NEVER MAKE FIRE IF HOTTUB IS NOT COMPLETELY FULL OF WATER.
- Take the cover away (needs two person!!) and put it on side (let no one walk over it so put it on safe place where is no traffic)
- Make fire inside the stove. Add more wood always when possible
- Good bath water is about 36-37 selcius. It takes about 2-3h to heat. The water is warm still on next day.
- Connect hottub to electric. Bubbles and lights works by buttons. During you warm water you can put bubbles on by 2min so the hot&cold water mix.
- When you stop using the hottub, remove it from electric.
- After you leave the cottage please drain all water out from the hottub. Remove the blug inside, bottom of the hottub. Please use pucket under the water so it wont make damage on yard.
- If you need waterpump during your stay (hottub gets too hot and you need to add cold water or you want change water what is wise to do every 2-3 days) you just connect the electric of the pump what is in water. Pums starts pump water right after it gets electric. When you are ready remove the wire from electric and remove the hose from the tub.
- If something you are not sure about please take a photo and text me! 😊 +358 440 859358